

# GUNCASKET

## THE SAFE ALTERNATIVE

Thank you for purchasing Gun Casket™, the Safe Alternative™. The factory default access code is **2-2-4-4**. Use this code when opening your Gun Casket™ for the **first time**. Carefully read the instructions below prior to changing your code. You may also view a video on how to change the access code on our website under the FAQ section ([guncasket.com/faq](http://guncasket.com/faq)). To avoid death or serious injury, we highly recommend changing the factory default access code prior to storing a weapon in your Gun Casket™.

## Changing your access code:

1. Press the key button on the far right side of the lock one time
2. Enter the factory default access code "2-2-4-4"
3. Enter "0-2"
4. Enter your own four digit access code (you will see two of five lights flash)
5. Enter the same four digit access code a second time (you will see four of five lights flash)
6. Your new access code is ready to use
7. **Write down your new access code and store it in a safe place**

## Storing your weapon:

For optimum performance and fast access to your weapon, you should store your weapon with the top of the barrel toward the hinged side of the safe. Using this orientation will help properly secure your weapon in your Gun Casket™ safe. This orientation applies to all Gun Casket™ safes regardless of the lock type.

The Gun Casket™ Team  
888-400-8752  
[info@GunCasket.com](mailto:info@GunCasket.com)  
[GunCasket.com](http://GunCasket.com)

